

Command Center Machine Room

INSTRUCTIONS:

To establish communication between Machine Room & Phones

LIFT HANDSET:

Dial Extension of Phone

► To communicate with locations:

LOCATION	ID	PRESS
	1	*1
	2	*2
	3	*3
	4	*4
	5	*5
	6	#1
	7	#2
	8	#3
	9	#4
	10	#5

► To communicate with all phones (two-way): Press * followed by 0

► To communicate with all phones (PA): Press * followed by 9

► To disconnect communication: Hang Up Handset

Command Center Machine Room

INSTRUCTIONS:

To establish communication between Machine Room, Phones & Command Center

LIFT HANDSET:

Dial Extension of Phones or Master Station

► To communicate with locations:

Location & Extension

► To disconnect communication: Hang Up Handset