

CSM-4 4-Camera Switching Module

OPERATING INSTRUCTIONS

AT THE VIDEO MONITOR STATION:


1. If you wish to view one (1) of the four (4) remote camera locations, simply depress the pushbutton marked CAM1, CAM2, CAM3 or CAM4, which corresponds to the camera you wish to view. Depress the button for 2-3 seconds. If less than four (4) cameras are used, some of these buttons may not be functioning buttons.

2. If the video monitor is not already lighted, it will light, enabling you to view the video screen, and camera you have selected. You may adjust the picture brightness, contrast and/or vertical hold as desired, using the front mounted rotary controls on the video monitor, depending on your video monitor model.

3. It is normal to hear a buzzer or tone/chime sound from your monitor handset, while you are depressing the camera activation button. If you have multiple monitors connected to ring together, it is normal to hear the buzzer or tone/chime sound at all of the monitor handsets connected together.

4. In systems with multiple door entry camera stations, the system will automatically switch the voice, video and door release functions to the last camera location, you have selected (see your system installer for more details on your specific system's functions).

5. The video screen will automatically time-out when the shut-off time programmed into each monitor has elapsed.

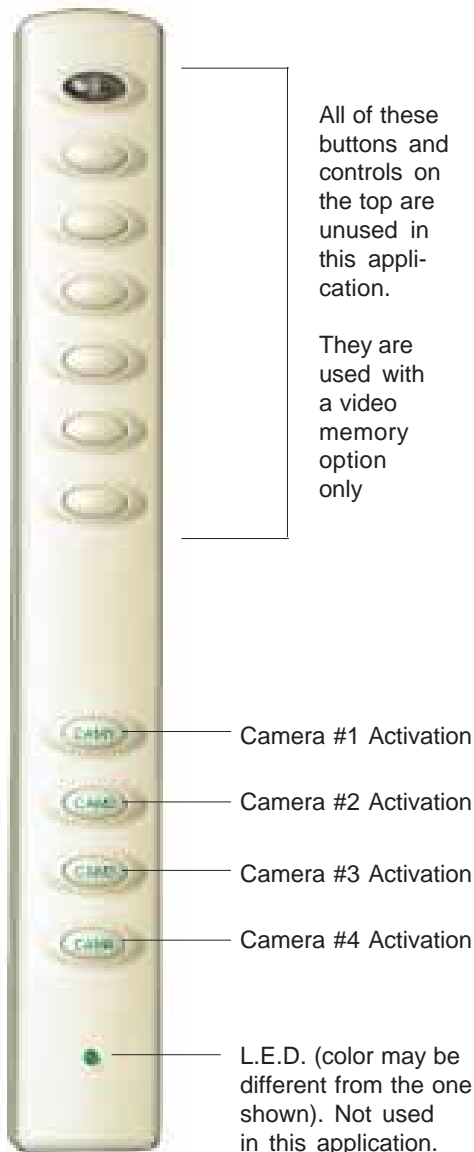

APPLICATION

The Alpha Communications®/S.T.R.™ CSM-4 series 4 camera switching module is used in addition to the VH30 series (B&W or COLOR) video-intercom monitor, to allow video monitor activation, and electronic switching of up to 4 cameras.

Copyright© 2003, Alpha Communications®, All Rights Reserved

FEATURES

- Rugged and Reliable. Simple to Operate
- Requires only a momentary button activation

Due to continuous product improvement, all colors, sizes, materials, finishes and specifications are subject to change without notice.