



## Resident Instructions for the HT3033 Qwik Bus™ Series Handset



### Basic Operation

To Answer call, lift handset.

To Release the door strike, if equipped, press the Key Button

### Changing Ring Volume

Lift handset and hang up.

Press and hold the **Function Button**. The ringing volume will cycle from loud to mute and back to loud again.

Release the button at the desired volume level.

If the volume is very low or muted, the red LED will flash when a call is received for approximately 45 seconds.

### Changing Ring Style

Lift handset and hang up.

Lift handset again and wait for Red light to light.

Press and hold the **Function Button** until you hear the current ring tone.

Release and press again to hear the next tone. Repeat until you hear the tone you want, and then hang up handset to save.