



Resident Instructions / User Guide for the FS1000 Series Apartment Station


DOOR RELEASE Button

Press to allow visitors to enter
(on systems so equipped)

RING VOLUME Button

With the Station OFF, hold down this button to adjust the ring volume. As you continue to hold it, you will hear the ring tone slowly go from loud to soft and then back to loud again. When you get to the volume you prefer, release the button and the level will stay there.

If the volume is all the way down, the red light behind this button will flash to warn that the unit will not ring when called. The green light behind the ON/OFF button will still flash when the station is called.

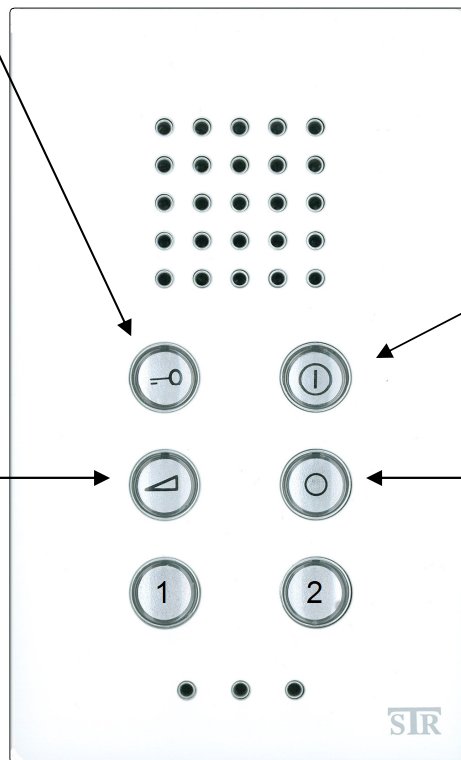

ON/OFF Button

This button will flash Green when this station is called.

To accept the call, press this button.

At the end of the conversation you may push this button to shut off the unit.

CALL DOWN Button

Pressing this button will call to the concierge station(s) (on systems so equipped).

When they respond, your station will ring. At this time press the ON/OFF Button to accept their callback.

Not typically used on entry call systems without one or more concierge stations.

Please Note: Other features and functions may be available depending on system configuration. Any buttons shown without a function are not used on this type of system.