



## Instructions for the HT333 QwikBus™ Series Handset



### Changing Microphone Sensitivity

Lift Concierge handset and then hang up. Lift up handset again.

Push and hold the **Function Button** to change mode.

Now you will hear a Beep tone. You can change the microphone sensitivity level by pressing and releasing the **Function Button** (One Beep, Two Beeps, Three Beeps).

Hang up handset when desired level is set.

### Changing Ring Volume

Lift handset and hang up.

Press and hold the **Function Button**. The ringing volume will cycle from loud to mute and back to loud again.

Release the button at the desired volume level.

If the volume is very low or muted, the red LED will flash when a call is received for approximately 45 seconds.

### Changing Ring Style

Lift handset and hang up.

Lift handset again and wait for Red light to light.

Press and hold the **Function Button** until you hear the current ring tone.

Release and press again to hear the next tone. Repeat until you hear the tone you want, and then hang up handset to save.