



## **INSTALLATION GUIDELINES and GENERAL INFORMATION:**

- 1. See the VM104 system wiring diagram (IL498) for the balance of the wiring connections required.
- 2. All low voltage wiring is #22 AWG, unless otherwise noted.
- 3. Observe all local and national electrical codes.
- 4. All terminals connections shown may not be in the order that they appear on the equipment.



## **TYPICAL WIRING INSTRUCTIONS** For TA104A Handset and VM104 Monitor

When using the TA104A handset as a remote handset connected to a VM104 video-intercom monitor.