


---

---

# ***DO NOT PLUG THIS POWER SUPPLY INTO THE WALL CURRENT, UNTIL YOU READ THIS IMPORTANT INFORMATION!!***

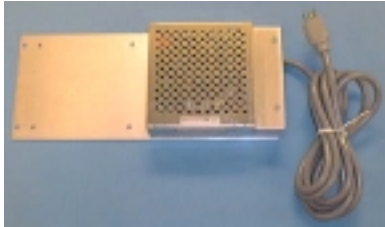

**Model PSDC24-2.5**



**Model PSDC24-5**



**Model PSDC24-12**

**NOTE:** The PSDC24 series power supplies come in three (3) capacities (2.5 amps, 5 amps and 12 amps), as indicated by the numbers at the end of the model number. All units come from the factory to operate on 115VAC primary power, with a standard U.S. electrical plug.

If you need to have the power supply operate on 220VAC/240VAC current for overseas operation, follow the simple instructions below.

---

---

## **IMPORTANT OPERATION NOTES AND RESTRICTIONS:**

- 1. Make sure the power supply is completely unplugged and disconnect from any power.**
- 2. Remove the vented metal cover by removing the screws (on one side) holding the cover in place. Be careful not to touch any of the electronic components with your hands or fingers.**
- 3. Look on the PC Board for a wiring harness with three (3) heavy wires attached (usually Red, Brown and Orange color).**
- 4. This harness is plugged into a 3-pin socket that configures the power supply for 115VAC.**
- 5. Carefully unplug the harness and plug it into the 2nd socket, located next to this socket. This 2nd socket is marked 220VAC/240VAC. Your power supply is now designed to work on 220VAC/240VAC primary power.**
- 6. If you have a different type of electrical wall outlet, you may need to change the primary power cable and/or plug. Please observe all local and national electrical codes.**



42 Central Drive, Farmingdale NY 11735-1202  
(631) 777-5500 Fax: (631) 777-5599  
**TOLL-FREE Tech Support 1-800-666-4800**  
Email: info@alpha-comm.com

## **PSDC24 Series Power Supply INSTALLATION INSTRUCTIONS**

For applying the proper input voltage to unit