


INSTALLATION GUIDELINES and GENERAL INFORMATION:

1. All low voltage wiring is #22 AWG, unless otherwise noted.
2. See wiring diagram #AWD013 for balance of system wiring information.
3. Observe all local and national electrical codes.
4. All terminals connections shown may not be in the order that they appear on the equipment.

 <p>42 Central Drive, Farmingdale NY 11735-1202 (631) 777-5500 Fax: (631) 777-5599 TOLL-FREE Technical Line 1-800-666-4800 Email: info@alpha-comm.com</p>	<p>TYPICAL WIRING DIAGRAM FOR R1 Buzzer Pulsator Adaptor used with NH200A Amplifier/Power Supply for a single entrance building application.</p>
---	---