

INSTALLATION GUIDELINES and GENERAL INFORMATION:

- 1. Only 4 of the 6 pins on the monitor plug-in harness are used. Any pin not labelled is not used.
- 2. Observe plug polarity.
- 3. Observe all local and national electrical and building codes.



Email:info@alphacommunications.com

TYPICAL PIN CONFIGURATIONS FOR STR™ VIDEO MONITOR PLUG-IN HARNESS TO VH250P CONNECTOR BOARD