



#### INSTALLATION GUIDELINES and GENERAL INFORMATION:

1. All low voltage wiring is #18 AWG, unless otherwise noted.
2. Observe all local and national electrical and building codes.
3. All terminals connections shown may not be in the order that they appear on the equipment.
4. Make sure to observe 24VDC polarity where noted.
5. For systems using more than 60 of the SF101T / LI381T stations, contact the factory for additional power supply requirements, or a larger power supply unit.
6. On the SF101T stations, do not pay any attention to any terminal markings or letters that may be on the station, but wire as per the COLORS shown above on the wiring harness only.



42 Central Drive, Farmingdale NY 11735-1202  
(631) 777-5500 Fax: (631) 777-5599  
**TOLL-FREE Technical Line 1-800-666-4800**  
Email: [info@alphacommunications.com](mailto:info@alphacommunications.com)

**TYPICAL WIRING INSTRUCTIONS**  
**For the AlphaTeller™ SF101T Teller Call**  
**Station(s) and the LI381T Dome Light(s)**  
**with the PSR-24/6 Power Supply**