


INSTALLATION GUIDELINES and GENERAL INFORMATION:



1. Observe all local and national electrical and building codes.
2. All terminals connections shown may not be in the order that they appear on the equipment.
3. This diagram does not show all of the possible configurations possible for the AF-1000 unit. This is a simplified diagram showing the most popular system configuration and components. For the complete system installation, wiring and programming, please see the complete AF-1000 installation manual.
4. All transformer and door release wiring shall be #18AWG and all remaining wiring can be #22 AWG.

 <p>42 Central Drive, Farmingdale NY 11735-1202 (631) 777-5500 Fax: (631) 777-5599 TOLL-FREE Technical Line 1-800-666-4800 Email: info@alphacommunications.com</p>	<p>TYPICAL WIRING INSTRUCTIONS For the AF-1000 Apt. Intercom Amplifier using 3, 4, 5 or 6 wire apt. stations with a single lobby entrance station.</p>
--	---