





Access Codes - COB

Wiring Diagram / Programming Guide

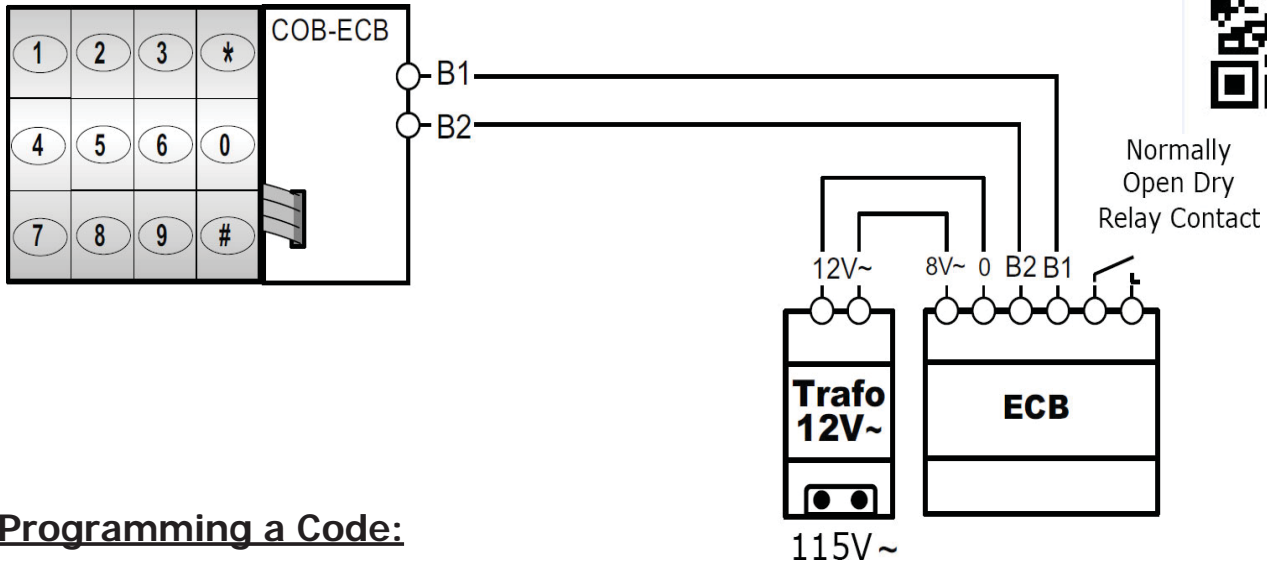

Programming a Code:

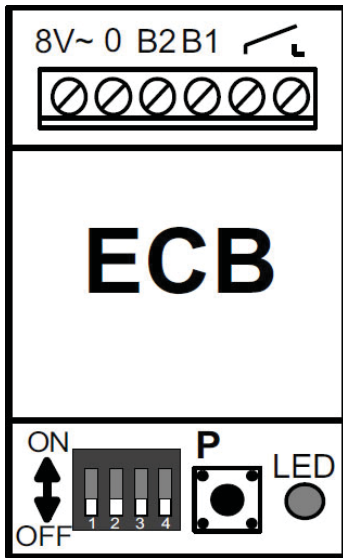

1. On the ECB, Press programming button (P) twice in quick succession . Programming Mode will be indicated by continuous illumination of the LED.
2. Enter 5-digit code on the keypad. For example:



After the fifth number of the code is entered, it will automatically be saved and the system will automatically return to the operating mode (LED flashes slow).

Dip-switch 1 changes the time between 1, 5 sec. (OFF) and 4, 5 sec. (ON). By default DIP switches 2, 3, 4 are in OFF position.

Deleting All Codes from Memory:

1. Set dip-switches 3 & 4 to the ON Position.
2. Hold the programming key (P) for about 5 seconds. Press and hold (until the LED starts to flash again).
3. Set dip-switches 3 & 4 back to the OFF Position.

Alpha Communications

42 Central Drive, Farmingdale NY 11735-1202
 Phone: (631) 777-5500, Fax: (631) 777-5599

TOLL-FREE Technical & Sales Line: 800-666-4800

Web: www.AlphaCommunications.com
 Email: info@alphacommunications.com