 
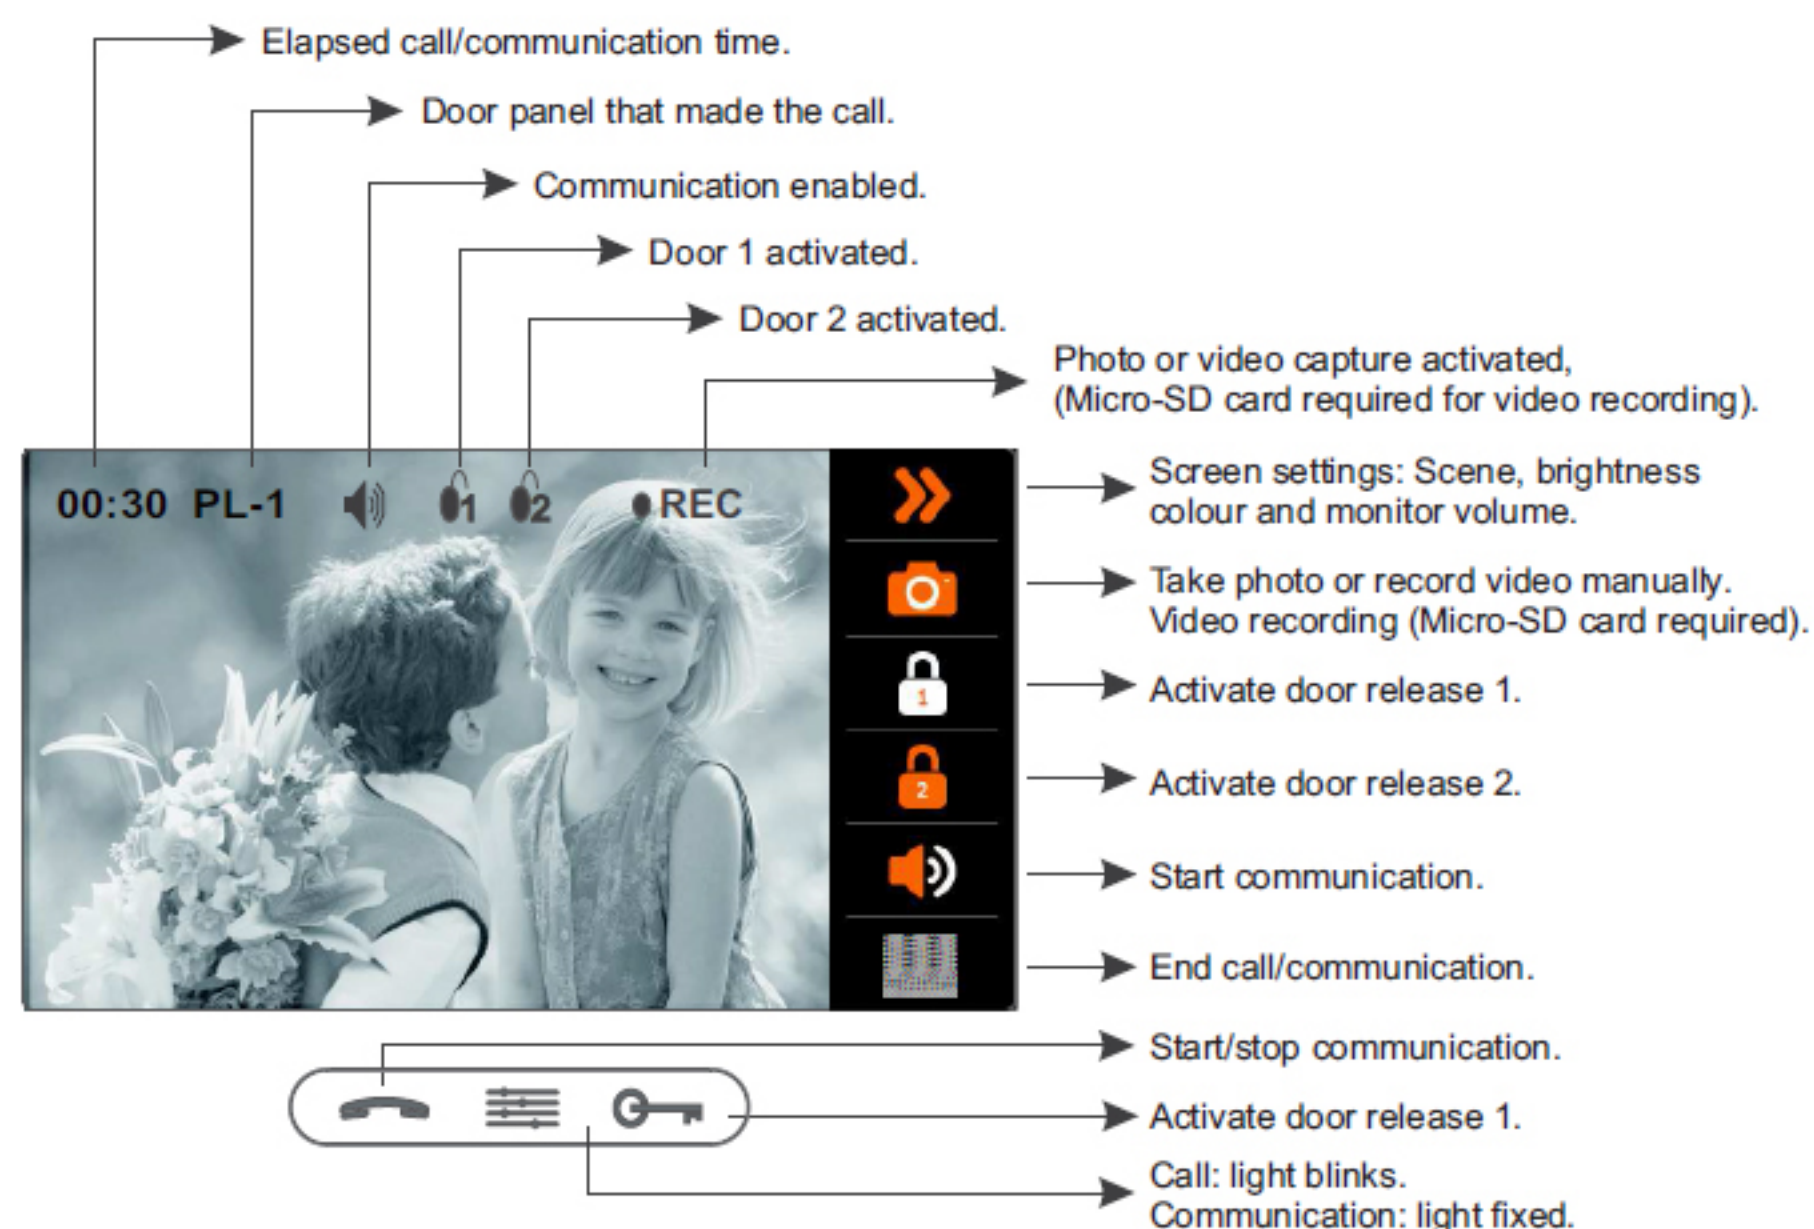 


(*) Monitor description upon receiving a call and during communication.(*) Answering a call from the door panel.

When a call is received, the monitor(s) will play a melody (the status light of the monitor(s) will blink) and show the image of the door panel on the main monitor without alerting the visitor. The monitor automatically takes a photo or records a video (Micro-SD card required for video). To answer the call, press button . Communication will last for 90 seconds or until button is pressed again. To open the door, press button during the communication or call processes: one press will activate the lock release for 5 seconds.

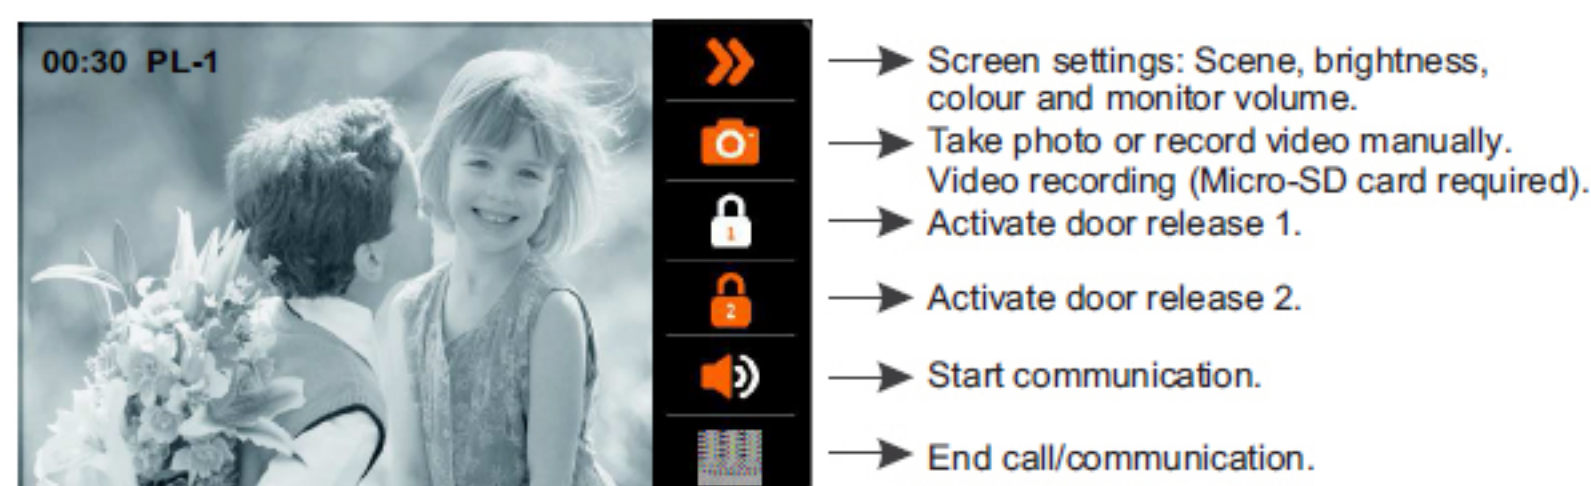

Start/stop communication.

To open the door, press the door release push button during the communication or call processes: one press will activate the lock release for 5 seconds.

(*) For more information, see the "THERA GB2 user manual" <http://interco.ms/awd215>



THERA GB2 MONITOR



QUICK GUIDE

Due to continuous product improvement, all specifications, sizes, colors, materials, features, and wiring information are subject to change without notice.



<http://alphacommunications.com>







 

 
SAFETY PRECAUTIONS

- **Always disconnect the power supply** before making modifications to the device.
- The fitting and handling of these devices must be carried out by **authorised personnel**.
- The wiring must run at least **40 cm away from any other wiring**.
- Do not overtighten the screws on the terminal block.
- Install the monitor in a dry protected location free from the risk of dripping or splashing water.
- Do not place in humid, dusty or smoky locations, or near sources of heat.
- Before connecting the system to the mains, check the connections between the door panel, power supply, distributors and monitors.
- Always follow the instructions contained in this manual.

(*) CHARACTERISTICS

 
- Hands-free monitor.
- 7" TFT colour screen.
- Monitor with simple installation (unpolarised 2 wire BUS).
- Touch screen for access and selection of menu functions.
- User menu.
- Installer's menu.
- Screen and volume settings menu.
- Start/stop communication capacitive touch switch.
- Menu access capacitive touch switch.
- Door release activation capacitive push button.
- Dip switches for setting the monitor address (call code).

SYSTEM OPERATION

- To make a call, the visitor must press the button of the apartment; an acoustic tone will be heard confirming the call is in progress once the push button has been pressed and the LED  will turn on. If vocal synthesis is activated then a "call is in progress" message will be heard confirming the call is in progress. At this moment the apartment's monitor receives the call. During the call the visitor can correct his call by pressing a push button corresponding to a different apartment, in which case the original call is cancelled.
- The call lasts for 40 seconds. Without alerting the visitor, their image appears on the master monitor during this time. To view the picture on a slave monitor this function must first be activated in the monitor. For kit villa application: the image appears on the monitor (with address code 0 "apartment 1" or monitor with address code 16 if the call is in "apartment 2") when receiving the call without the visitor being alerted. If the call is not answered within 40 seconds, LED  will turn off and the channel will be freed.
- To establish communication, press the monitor's push button  and the door panel's LED  will turn on. If the vocal synthesis is enabled the message "you can speak now" will be heard confirming the communication is activated.
- Communication will last for one and a half minutes or until the push button  is pressed again. When communication has finished, LEDs  and  will turn off and the system will be freed. If vocal synthesis is activated then a "communication is finished" message will be heard in the door panel confirming the communication has finished.
- To open the door press the  push button during the call or communication processes: one press will activate the door release for five seconds and LED  will also turn on for five seconds. If vocal synthesis is activated then a "door is open" message will be heard in the door panel.
- The descriptions of the function push buttons are found on page 3.


(*) For more information, see the "THERA GB2 user manual" <http://interco.ms/awd215>

(*) MONITOR DESCRIPTION

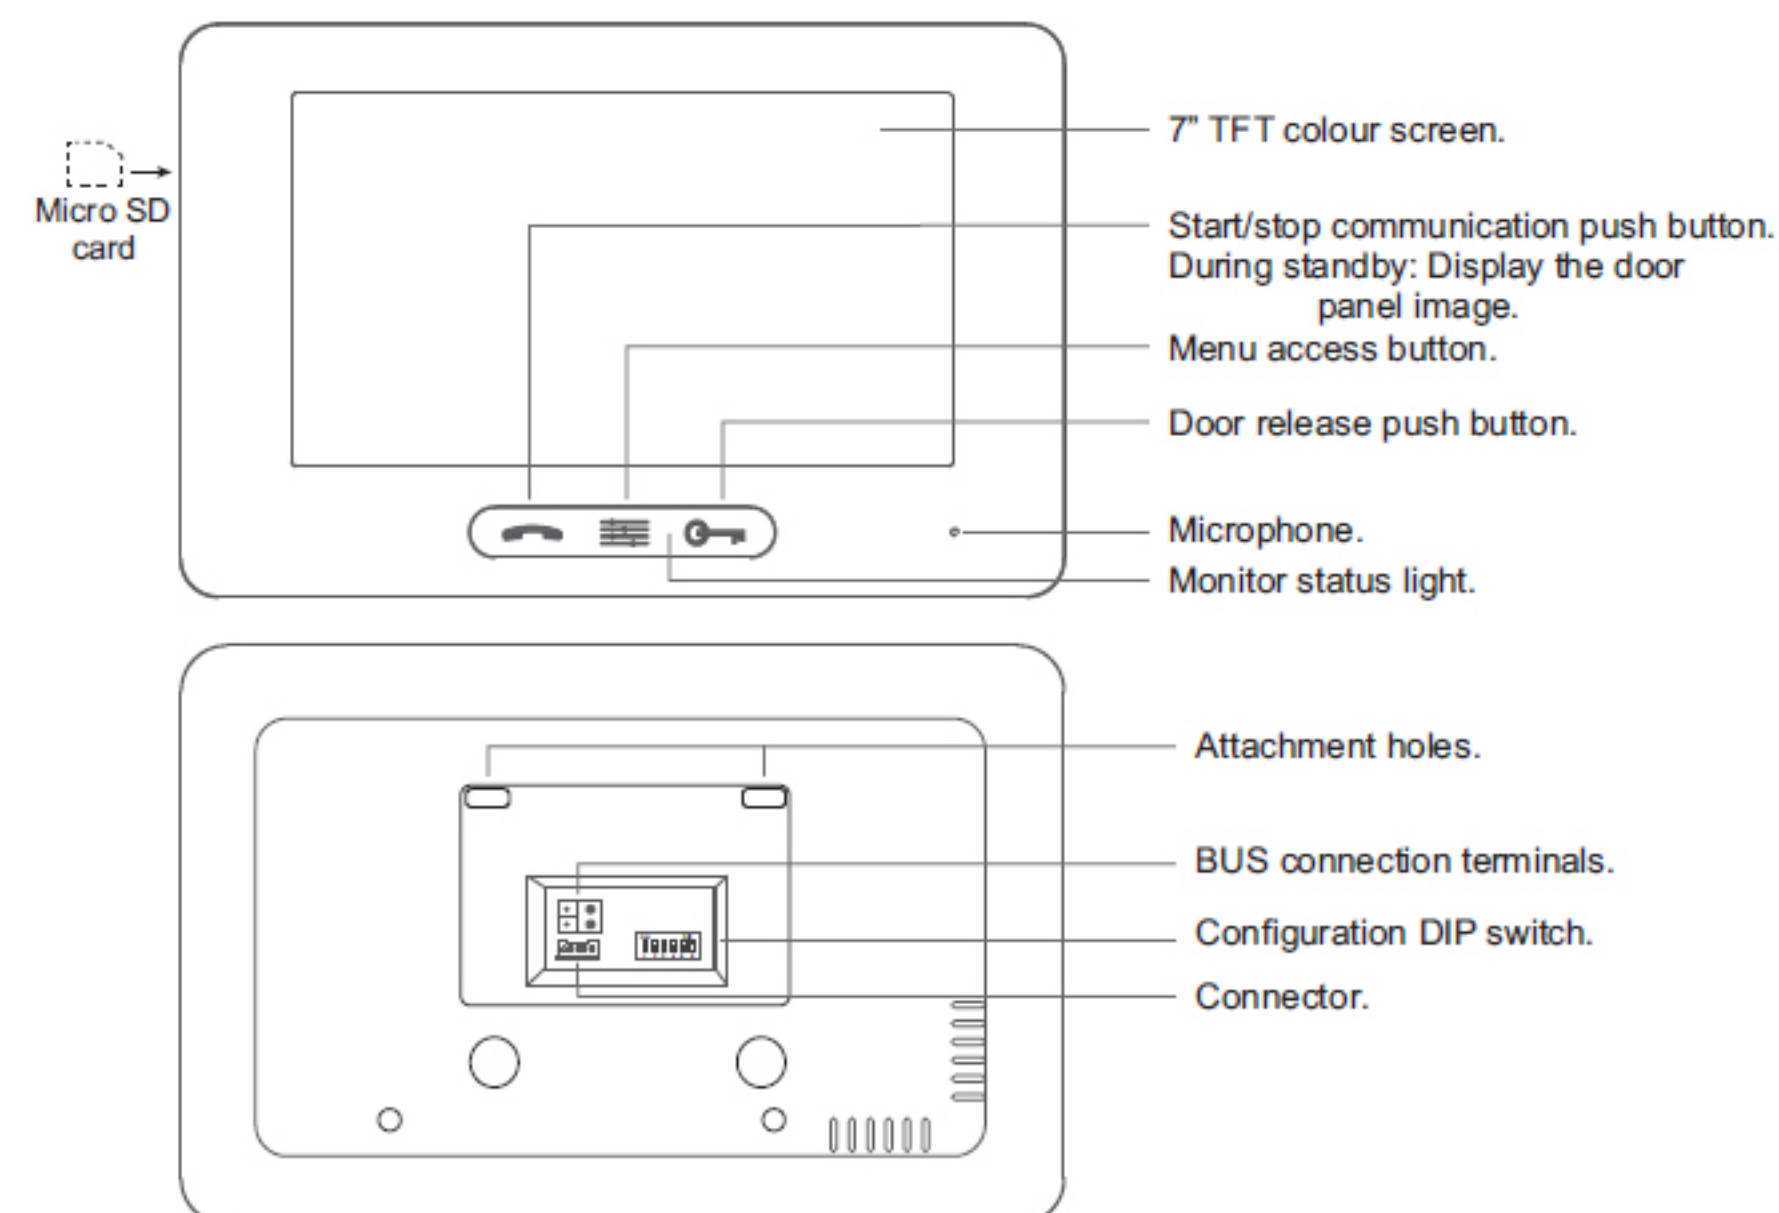

(*) Monitor address (code) setup:

 1-apartment kit 2-apartment kit

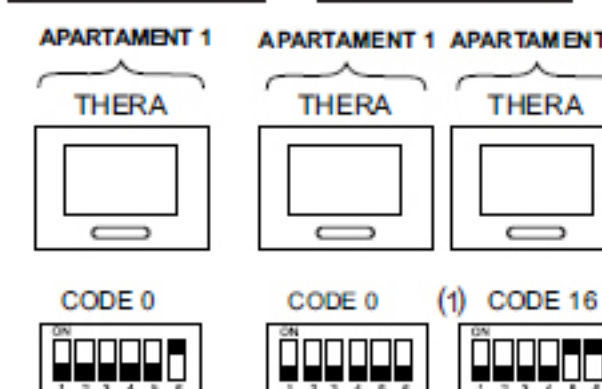

(1) 2-apartment kit: Monitor code 16 is the last, dip 6 of the end of line to ON.

Building

Dip6: Sets the end of line. Set to ON in monitors where the video cable terminates. Remainder set to OFF.

 
Dip1 to Dip5: Set the monitor address (addresses 0 to 31).

Switches set to OFF have a value of zero.

The values of the switches set to ON are shown in the enclosed chart. The monitor code will be the sum of the values of the switches set to ON.


Value chart

Switch number: 1 2 3 4 5
ON value: 1 2 4 8 16

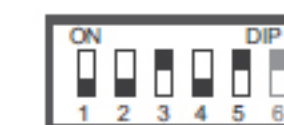

Example: 0+0+4+0+16 = 20

 (*) MONITOR INSTALLATION

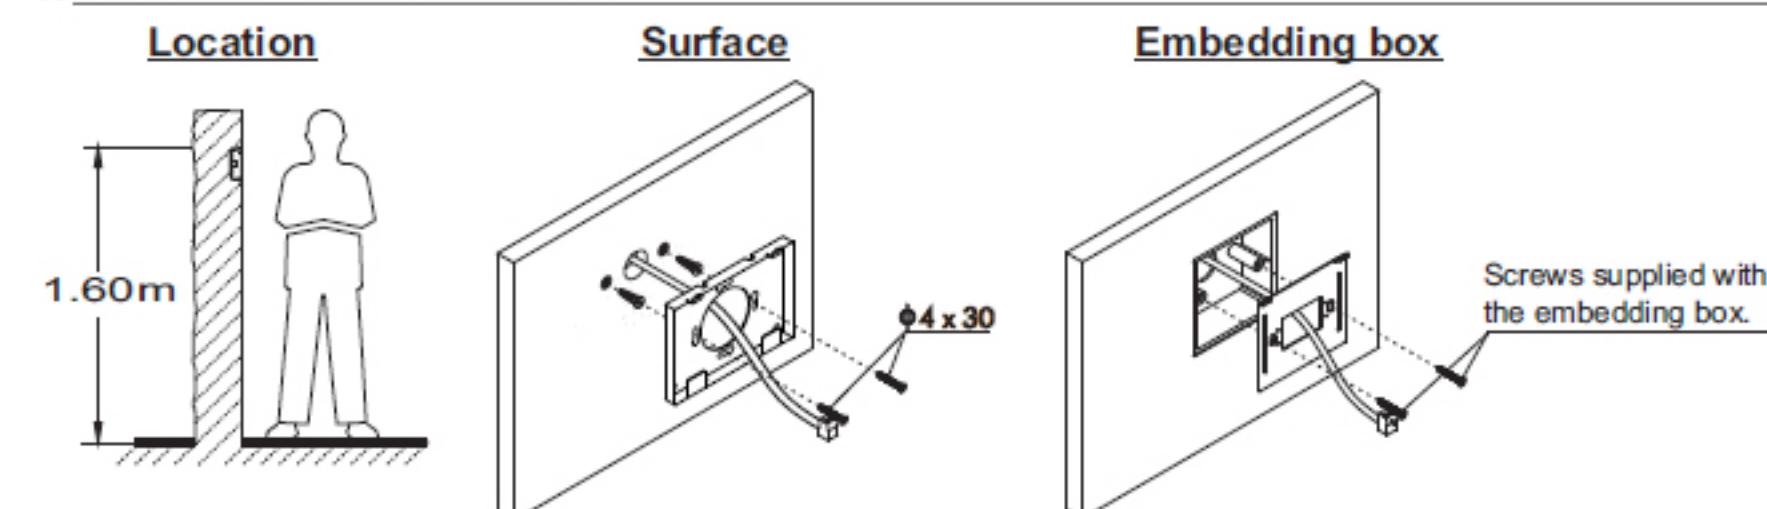

(*) For more information, see the "THERA GB2 user manual" <http://interco.ms/awd215>