 


VESTA2 GB2 / VESTA7 GB2
 wiring connections - connect the SAR-12/24 to the RED and BLACK connections on the back of the VESTA monitor(s)




L1, L2: Bus connection.
HZ, -: Door bell connection.
SA, -: Call repeater connection (SAR-12/24).
 (12Vdc/50mA maximum).

T-562 HANDSET
 wiring connections - connect the SAR-12/24 to terminals 'SA' and '-' on the T-562 handset(s)

INSTALLATION GUIDELINES and GENERAL INFORMATION:

1. See the specific system wiring diagram for the balance of the wiring connections required.
2. All low voltage wiring is #18 AWG, unless otherwise noted.
3. Observe all local and national electrical and building codes.
4. Terminal connections shown may not be in the order in which they appear on the equipment.

 <p>42 Central Drive, Farmingdale NY 11735-1202 (631) 777-5500 Fax: (631) 777-5599 TOLL-FREE Technical Line 1-800-666-4800 Email: info@alphacommunications.com</p>	<p>TYPICAL WIRING INSTRUCTIONS for the SAR-12/24 Call Repeater / Relay with the VESTA2 GB2 and/or VESTA7 GB2 series video monitors or the T-562 GB2 Handset Stations</p>
---	--