



INSTALLATION MANUAL




CVA-NEXA/60

Button Connections


The CVA modules (maximum 2), can each handle 60 buttons. Connect the EL632 module to the first CVA module's CN1 terminal. Make sure DIP Switch #3 on the EL632 panel is in the OFF position.

If you are using a second CVA module, connect it's CN1 terminal to the CN2 terminal on the first CVA module. On the second CVA module set DIP Switch #1 to the ON position.

1-60 Buttons

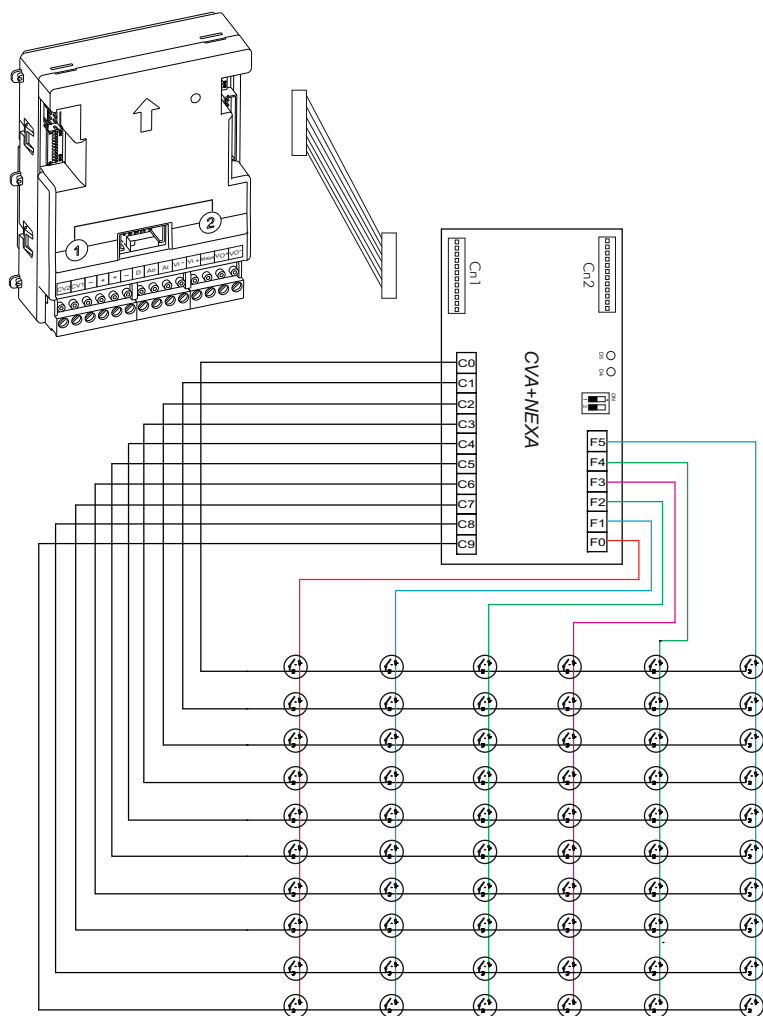

61-120 Buttons

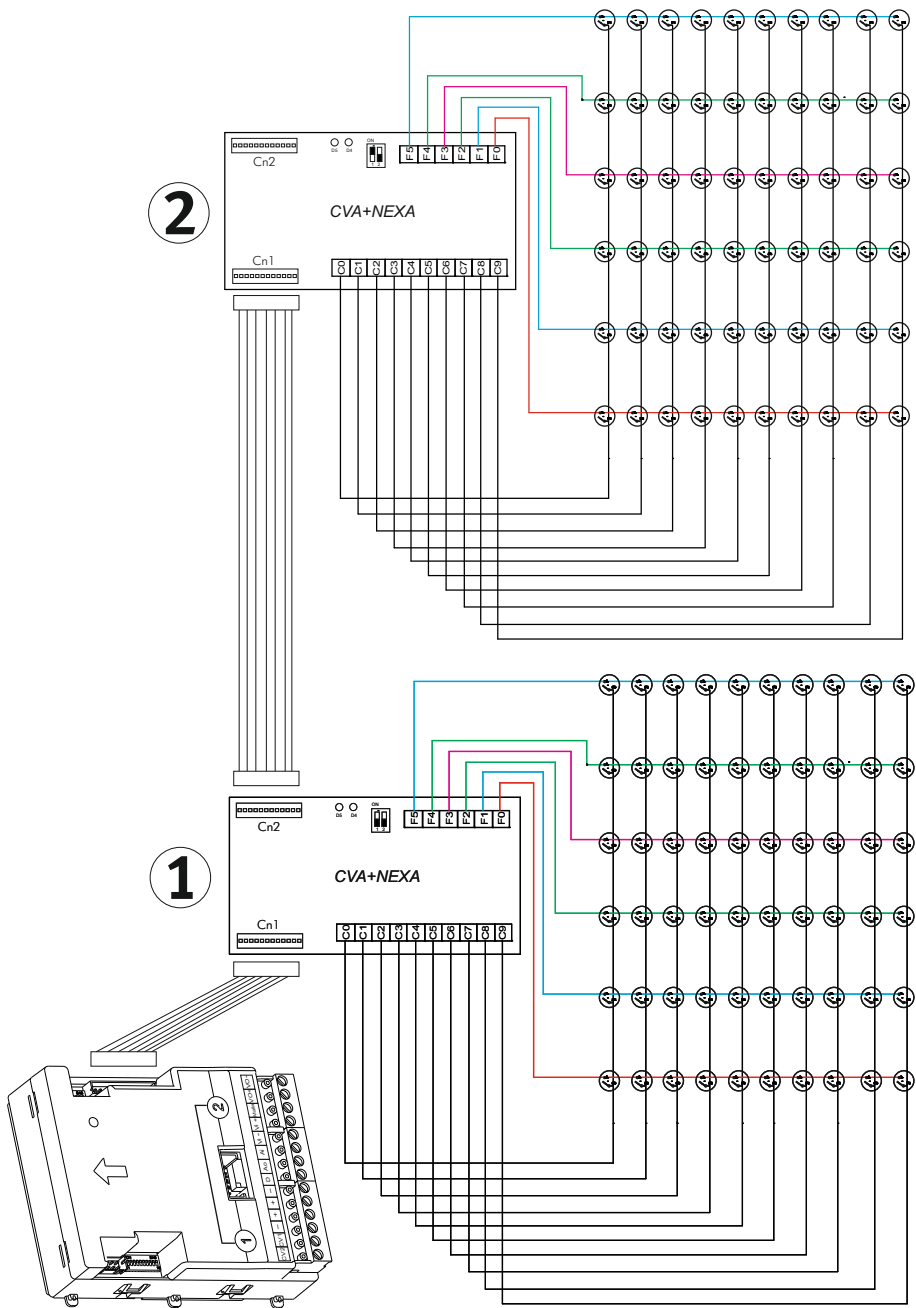

Terminal Output Codes: IP Plus, 2Pus System

CVA-NEXA/60 1	Beldrukker code										
		C0	C1	C2	C3	C4	C5	C6	C7	C8	C9
	F0	1	2	3	4	5	6	7	8	9	10
	F1	11	12	13	14	15	16	17	18	19	20
	F2	21	22	23	24	25	26	27	28	29	30
	F3	31	32	33	34	35	36	37	38	39	40
	F4	41	42	43	44	45	46	47	48	49	50
	F5	51	52	53	54	55	56	57	58	59	60
CVA-NEXA/60 2	Beldrukker code										
		C0	C1	C2	C3	C4	C5	C6	C7	C8	C9
	F0	61	62	63	64	65	66	67	68	69	70
	F1	71	72	73	74	75	76	77	78	79	80
	F2	81	82	83	84	85	86	87	88	89	90
	F3	91	92	93	94	95	96	97	98	99	100
	F4	101	102	103	104	105	106	107	108	109	110
	F5	111	112	113	114	115	116	117	118	119	120

Terminal Output Codes: GB2 System

Button Codes 0 and 1 can not be used on the first riser. They are built-in to the EL632 Module.

CVA-NEXA/60 1	Beldrukker code										
		C0	C1	C2	C3	C4	C5	C6	C7	C8	C9
	F0	11	2	3	4	5	6	7	8	9	10
	F1	21	12	13	14	15	16	17	18	19	20
	F2	31	22	23	24	25	26	27	28	29	30
	F3	9	0	1	2	3	4	5	6	7	8
	F4	19	10	11	12	13	14	15	16	17	18
	F5	29	20	21	22	23	24	25	26	27	28
CVA-NEXA/60 2	Beldrukker code										
		C0	C1	C2	C3	C4	C5	C6	C7	C8	C9
	F0	7	30	31	0	1	2	3	4	5	6
	F1	17	8	9	10	11	12	13	14	15	16
	F2	27	18	19	20	21	22	23	24	25	26
	F3	5	28	29	30	31	0	1	2	3	4
	F4	15	6	7	8	9	10	11	12	13	14
	F5	25	16	17	18	19	20	21	22	23	24

RD-GB2 1 =	
RD-GB2 2 =	
RD-GB2 3 =	
RD-GB2 4 =	

Alpha Communications®

42 Central Drive, Farmingdale, NY 11735-1202

Phone: 631-777-5500 | Fax: 631-777-5599 | Toll-Free: 800-666-4800

<https://www.alphacommunications.com>