
## ALPHATOUCH<sup>T</sup> ATAC102 QUICK START GUIDE

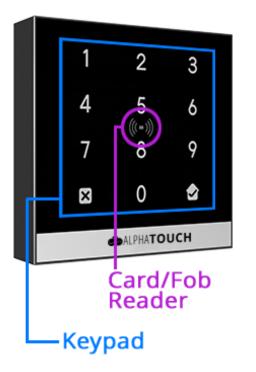



PLEASE SEND US PHOTOS OF YOUR INSTALLATION. IT COULD BE FEATURED ON OUR SOCIAL MEDIA! SEND PHOTOS TO: INFO@ALPHATOUCH.INFO

NOTE: SINCE ALPHATOUCH<sup>™</sup> IS AN EVER-IMPROVING PLATFORM, PRINTED DOCUMENTATION, SUCH AS THIS MANUAL, MAY NOT BE 100% UP-TO-DATE. <u>FOR THE MOST</u> <u>UP-TO-DATE DOCUMENTATION, PLEASE VISIT</u>: https://www.alphatouch.info/help





42 Central Drive Farmingdale, NY 11735-1202 Phone: 631-777-5500 | Fax: 631-777-5599 http://www.alphacommunications.com

Copyright<sup>©</sup> 2023. Alpha Communications<sup>®</sup> All Rights Reserved AWD301 – Rev April 2023


## **Included Hardware**

Before you begin using the device, please check the version you have and make sure that the following items are included in the shipped box:

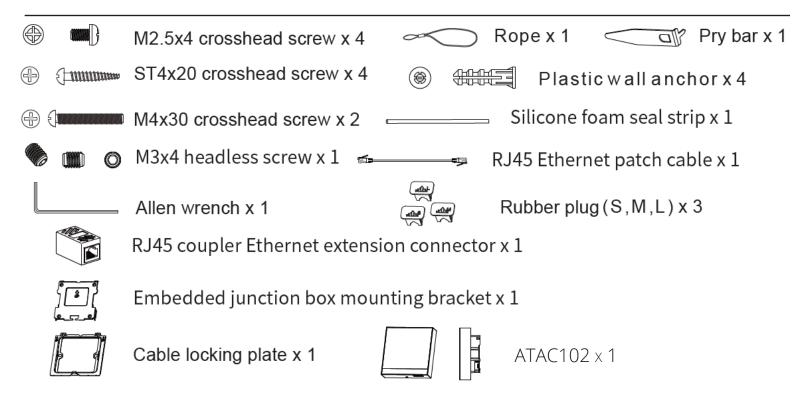

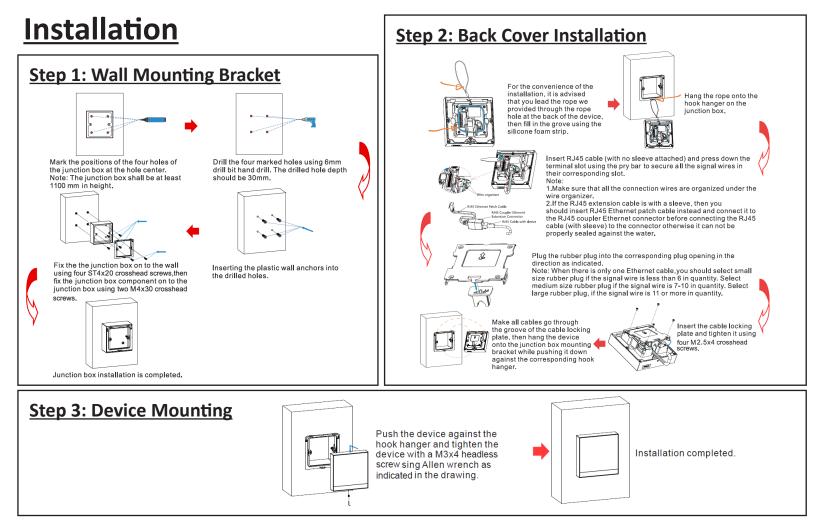

## **Device Wiring**

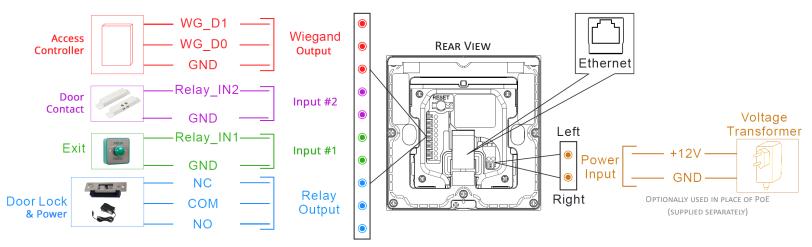

## **12VDC 1A Wire Lengths**

If you are using 12VDC power instead of PoE, please follow these wire gauge and length limitations

	20 AWG	22 AWG	24 AWG	26 AWG
12VDC 1A	≤160'	≤130'	<mark>≤</mark> 98'	≤ 49'
Power Adapter	≤ 50m	≤ 40m	≤ 30m	≤15m