


CONNECTION INSTRUCTIONS:


NC365/A/AT or NC366 A/AT Transmitter

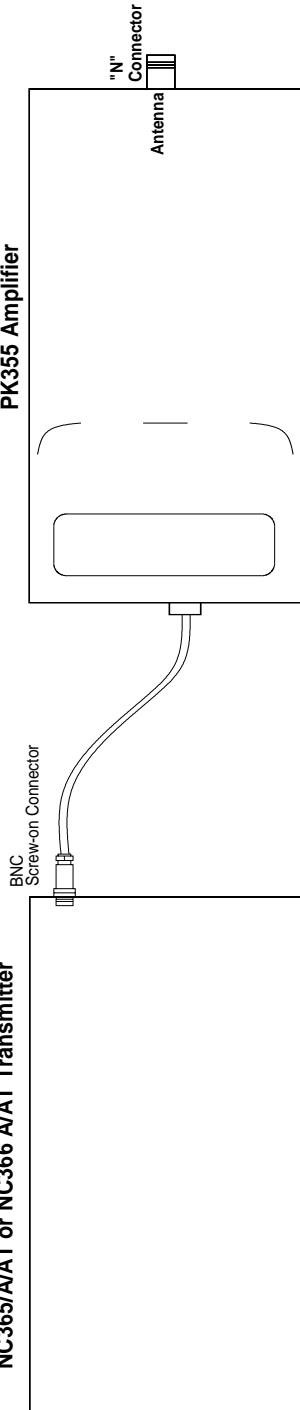

(NEVER transmit without an antenna connected to the PK355.)

1. Connect antenna to PK355.
2. Connect coaxial cable from PK355 to NC365/A/AT or NC366A/AT.
3. Apply power to transmitter, then to amplifier.
(If applicable, connect backup battery inside transmitter & amplifier.)
4. Send a page to test functionality.

BATTERY REPLACEMENT INSTRUCTIONS

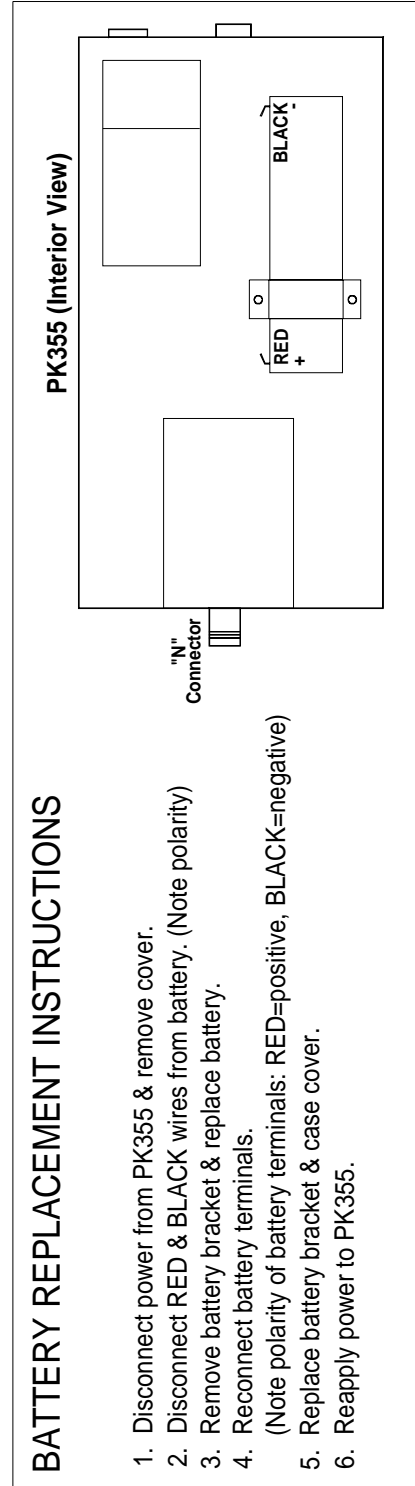

1. Disconnect power from PK355 & remove cover.
2. Disconnect RED & BLACK wires from battery. (Note polarity)
3. Remove battery bracket & replace battery.
4. Reconnect battery terminals.
(Note polarity of battery terminals: RED=positive, BLACK=negative)
5. Replace battery bracket & case cover.
6. Reapply power to PK355.

IL722 PK355 wiring diagram Rev1 051407 1.dc

Copyright © TekTone Sound & Signal Mfg., Inc. All Rights Reserved