




...clearly the best.



## NC150R User Guide

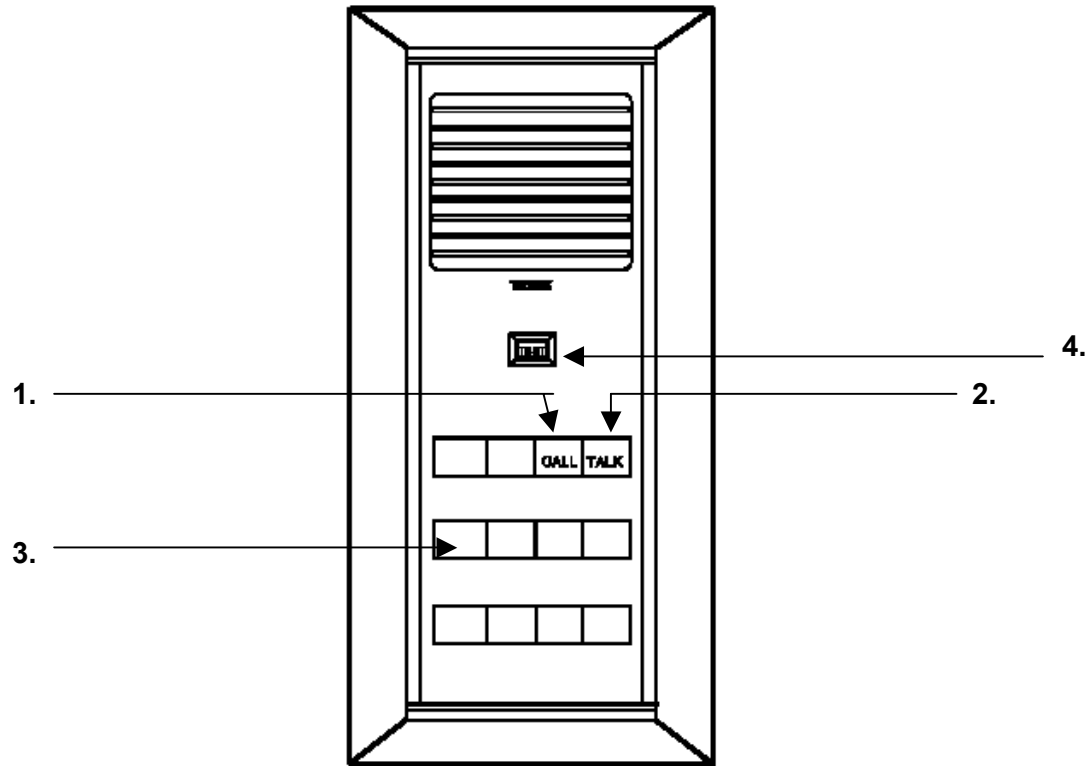


NC150R

1. **Call Button:** Tone call to selected remote when pressed  
**Call Lamp:** Indicates incoming call when illuminated.
2. **Talk Button:** Talk when pressed Listen When released.
3. **Selector Button:** Establishes conversation path with associated remote station when depressed.  
**Station Selector Lamps:** Indicates incoming call from associated remote when illuminated.
4. **Lamp Test Button:** Illuminates all lights on panel when pressed.

### Call a Remote:

- Locate the station selector button associated with the remote station to be called. Press that selector button to establish a conversation path. The remote station's **RESET** lamp will illuminate.
- Press the **TALK** button while speaking, and release button to listen. The remote area may be monitored by selecting the remote station and releasing the **TALK** button.
- When conversation or monitoring is complete, press the station selector button to release it. The remote station's lamp will turn off.

## Remote Stations

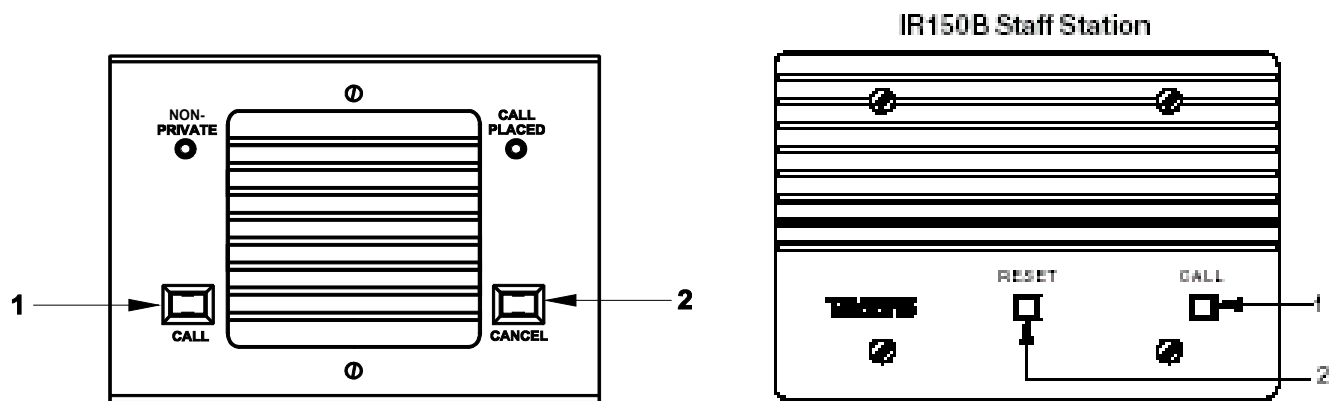

1. **Call Button:** Places a call when pressed.  
**Call-Placed Lamp:** Indicates a call is placed when illuminated.
2. **Reset Button:** Cancels the call when pressed.  
**In-Use LED:** Indicates station is in use when illuminated.

### IR150N Remote Station

**Call the NC150R Master Station:** Press the **CALL** button. The call-placed lamp will illuminate to indicate call placement. When the call is answered, the call-placed lamp will go off and the in-use LED will illuminate to indicate a communication path has been established to the master station. Speak in a normal voice.

**Cancel a Call:** Press the **RESET** button. Call-placed lamp will go off.

**Alpha Communications® • 42 Central Drive • Farmingdale NY 11735-1202**  
Phone 631-777-5500 • Fax 631-777-5599 • TOLL-FREE 1-800-666-4800 • Email: [info@alpha-comm.com](mailto:info@alpha-comm.com)