


The 2100-LINESIM allows the AlphaRefuge™ 2100 series phones to be used as an intercom system. If the AlphaRefuge™ 2100 series phone needs to call an outside number, the 2100-LINESIM will need to be replaced by an analog telephone line. The 2100-LINESIM may work with other other Alpha Communications® products other than the AlphaRefuge™ 2100 series. Contact our technical dept. for more details. **PLEASE NOTE:** in order for this device to place/receive phone calls, you need to set up and pay for a separate SIP account with a SIP provider (not provided by Alpha Communications®).

Connecting the 2100-LINESIM:

1. Plug the supplied power connector into a 120VAC power source with battery back-up or the Alpha Communications® model# PWRAPC back-up unit.
2. Plug the other end of the power connector into the 2100-LINESIM.
3. Plug one end of a standard phone line cable with RJ11 connectors into the port labeled PHONE on the 2100-LINESIM.
4. Connect the other RJ11 end of the phone cable to the OUTSIDE LINE port on the AlphaRefuge™ 2100 series Master Station.

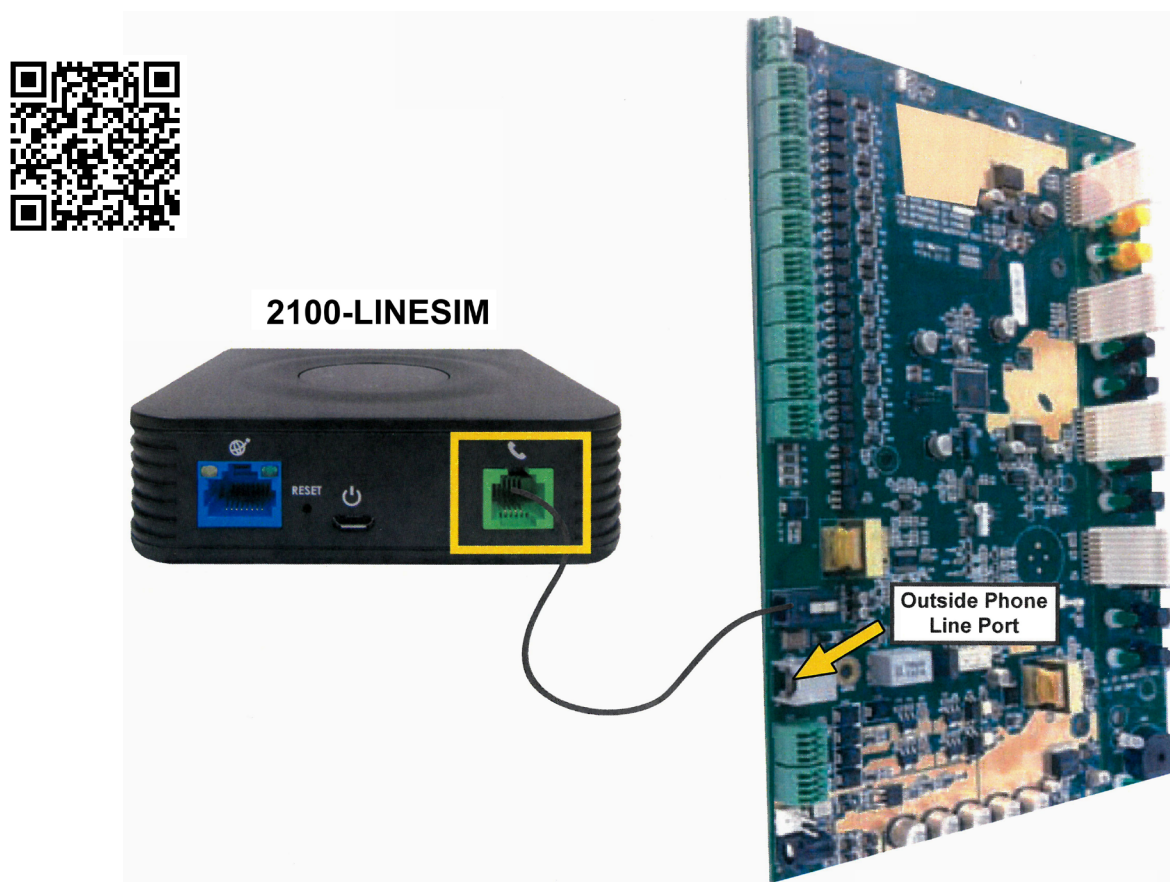

NOTE: See the AlphaRefuge™ 2100 series installation manual for complete wiring and programming instructions.



42 Central Drive, Farmingdale NY 11735-1202
(631) 777-5500 Fax: (631) 777-5599
TOLL-FREE Technical Line 1-800-666-4800
Email: info@alphacommunications.com

TYPICAL INSTALLATION AND PROGRAMMING/USE INSTRUCTIONS for the 2100-LINESIM Phone Line Simulator Unit