




TA150N, TA200N Handset Installation Instructions

IL738
Section E
Rev. 1 - 01/2008

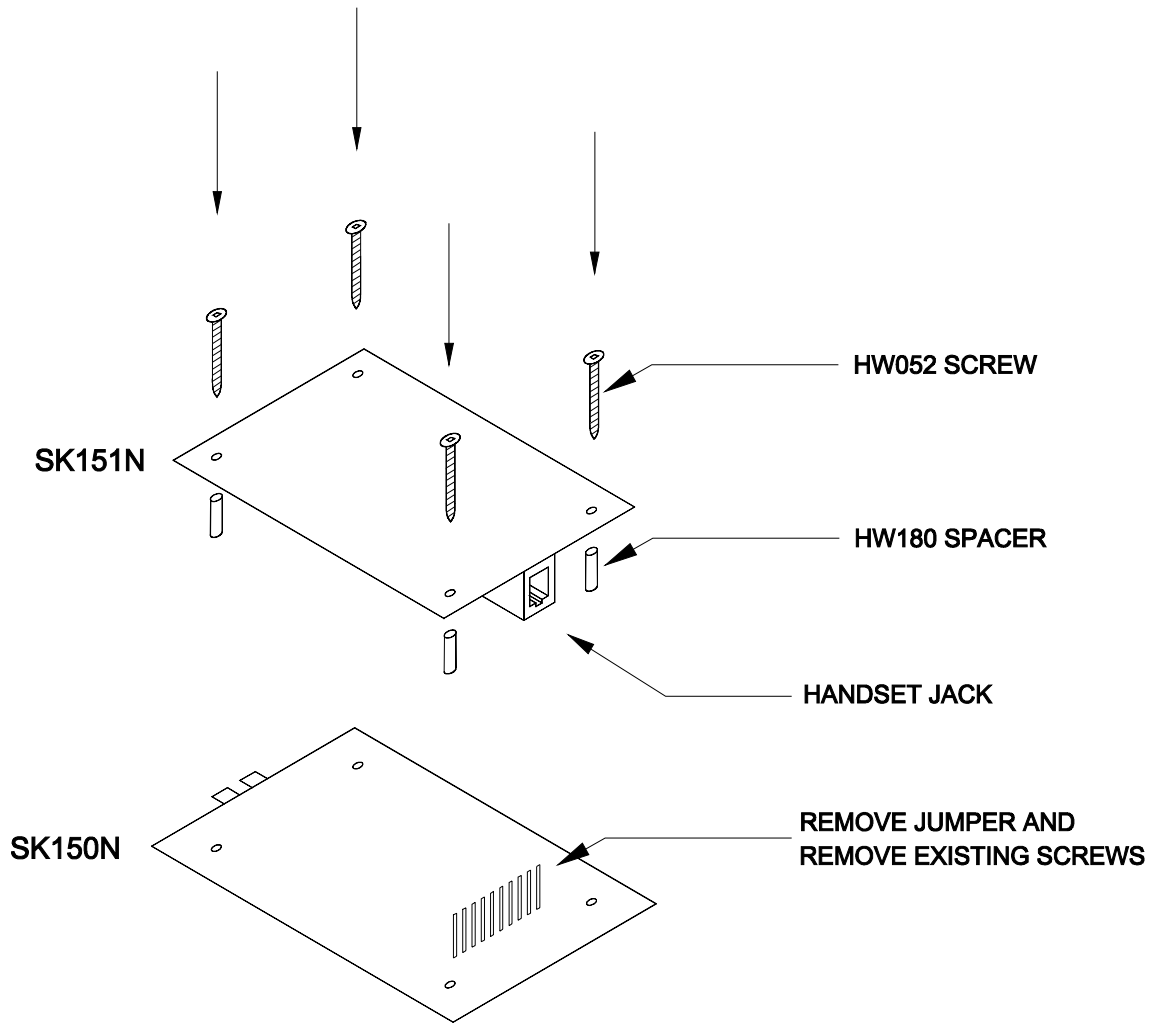

PROCEDURE:

1. Disconnect power from unit.
2. Remove jumper from rear of SK150N.
3. Remove screws at each corner of SK150N. (These will be discarded)
4. Attach SK151N board—inserting screws and spacers as illustrated.
5. Connect handset cord into jack on SK151N.
6. Apply power to unit & test handset operation.

* OBSERVE PIN ALIGNMENT DURING BOARD INSTALL *

Alpha Communications® • 42 Central Drive • Farmingdale NY 11735-1202

TOLL-FREE Technical Line 1-800-666-4800 • Phone: 631-777-5500 • Fax: 631-777-5599

Website: www.AlphaCommunications.com • Email: info@alphacommunications.com

TekTone®'s quality system is registered by UL® to the ISO 9001:2000 standard. (File #A10766.)