

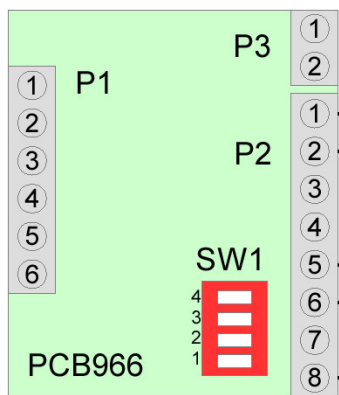


**OPTIONAL
Foot Switch
Connections**

NOTE: terminals shown may not be in the order that they appear on the equipment.

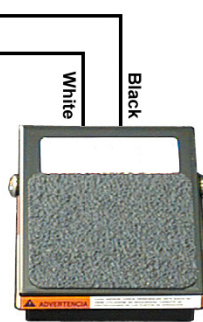

**PC Board on Rear
of SS200 series
Master Station**

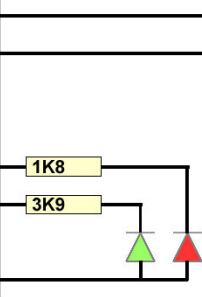

**ST-FOOT
Foot Switch**

NOTE:
When using the ST-FOOT
foot switch for Push-To-Talk,
connect to terminals '1' & '2'
on the P2 terminal strip.

Alternately, you can use the
foot switch for Push-To-Cancel
by connecting to terminals
'1' & '4' instead.



42 Central Drive, Farmingdale NY 11735-1202
(631) 777-5500 Fax: (631) 777-5599
TOLL-FREE Technical Line 1-800-666-4800
Email: info@alphacommunications.com

**Wiring diagram for the SS201 Clean Room
Intercom system and showing the optional
ST-FOOT Press-To-Talk Foot Switch**