




SC-100L Battery Start-Up Procedures

Do not adjust dials!
(typical of two)

Questions? Call us at
888-666-4800 or visit
alphacommunications.com

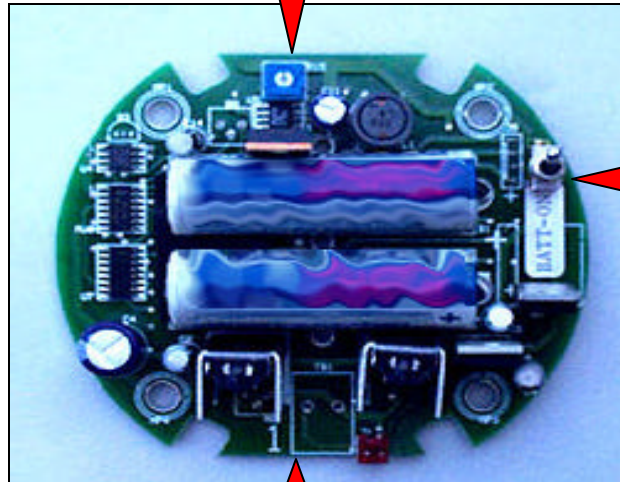

To activate the
battery circuit,
move the
toggle switch to the

Do not adjust dials!
(typical of two)

*This picture shows "LL" option w/ two AA
batteries. Standard units come with only one AA*

PLEASE READ BEFORE USING FOR THE FIRST TIME.

1. Locate the toggle switch on the battery circuit card and switch it to the "on" position.
2. Replace the electronics/gooseneck assembly back into the housing. Make sure the interconnect cable is attached.
3. Charge the unit for 6 hours prior to first use on battery power.
4. Refer to the Battery Unit Preparation document for more details.