




## INSTALLATION INSTRUCTIONS FOR THE SPECTRUM/HORIZON PEDESTAL MOUNTING PLATE

- When you receive the Spectrum/Horizon pedestal mounting plate, it should include the following:
  - 8 5/16" (h) x 12 7/16" (l) x 3/16" (w) Pedestal Mounting Plate
  - 2 - Nut Plates
  - 4 - 1/4 - 20 Flathead Screws
  - 4 - 10-32 Roundhead Machine Screws
- Depending on the model of your Sentex system, make sure that the pedestal mounting plate is installed vertically or horizontally .
- Only use the 1/4 - 20 flathead screws supplied by Sentex when you are installing the pedestal mounting plate to the pedestal. If you do not use the screws supplied by Sentex, you might experience problems with the installation of your system.
- Only use the 10 - 32 roundhead machine screws supplied by Sentex when you are installing your Sentex system to the pedestal mounting plate. If you do not use the screws supplied by Sentex, you might experience problems with your system.

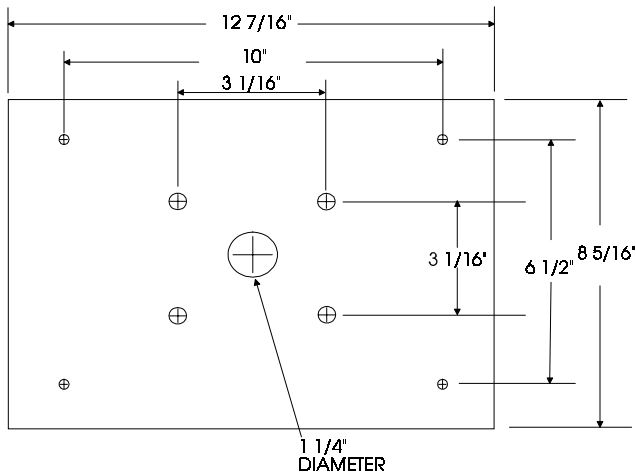

Dimensions of the Pedestal Mounting Plate  
(3/16" thick)

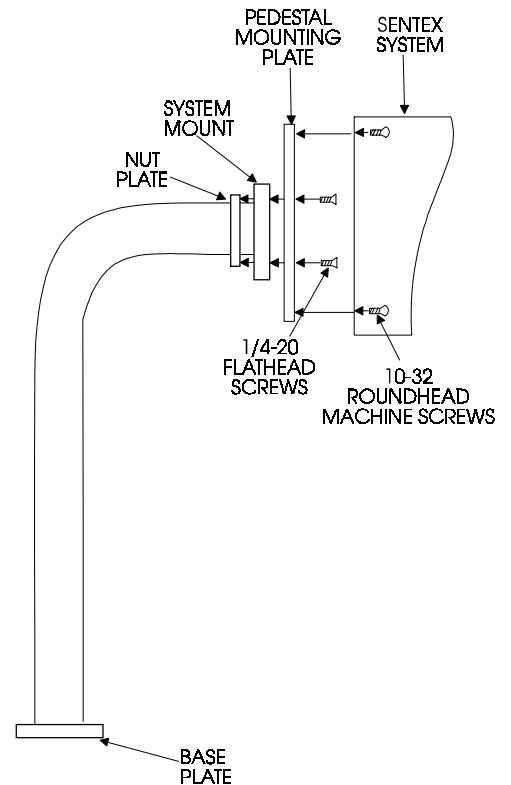


Diagram of the Pedestal Mounting Plate  
Installation