


How a Visitor Contacts the Resident:

Single Family Residence: When a visitor presses the “CALL” button, the system rings your telephone.



Visitor presses call button to contact resident

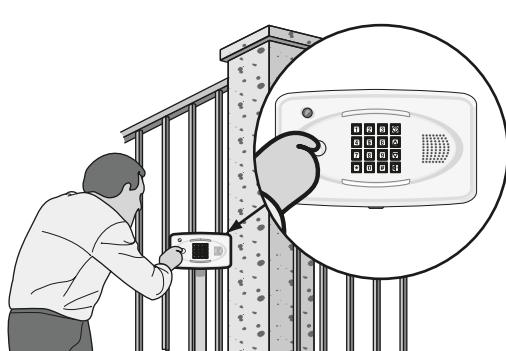


Resident can grant access to visitor by pressing “9”
or deny access by pressing “*” on the resident telephone



Visitor gains entry

Multi-Tenant Complex: A visitor enters your Directory Code on the unit keypad. The system dials your telephone number. The visitor never sees your telephone number.

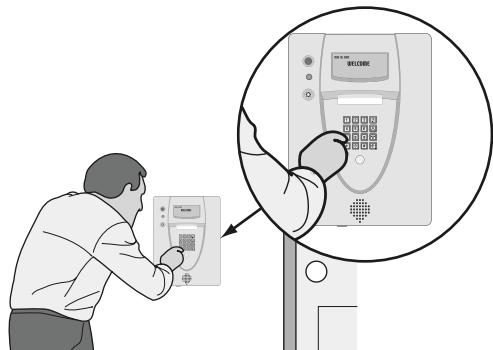

Visitor presses call button to contact resident



Resident can grant access to visitor by pressing “9”
or deny access by pressing “*” on the resident telephone



Visitor gains entry

When You Answer the Visitor’s Call


The call time is limited. When 10 seconds of talk time remain the unit will emit 10 beeps. After access has been granted or denied, the system will automatically end the call to ensure the system is available to other visitors.

CALL WAITING (Single Family Residence ONLY):

Press “2” on your telephone keypad to toggle between another telephone call and the visitor call at the gate/door.

GRANTING ACCESS:

If you are opening a door, the system will unlock it for a preset period of time. The system will also emit audio feedback or play a message.

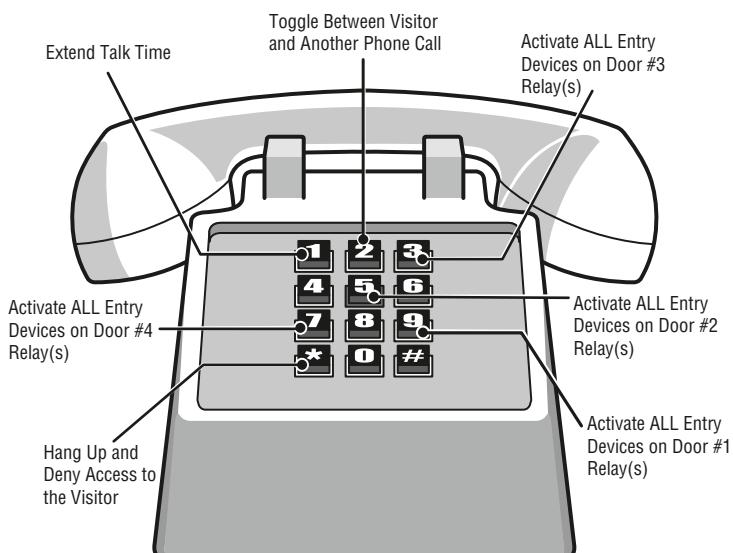

Resident Instructions (continued)

Using Entry Codes

An Entry Code allows access to a controlled area by entering a numeric code on the unit keypad.

Enter your assigned Entry Code (3-9 digits). If you make an error while entering your code, press “*” to cancel.



Speaking Through the Unit:

120

This feature is used to initiate communications from the resident phone through the unit at any time. The communication is two-way. You may use your phone as described in “When you answer the visitor’s call.”

- ① Press **#** **#** from the residence phone.
- ② Enter the Unit ID code (if applicable).
- ③ Press **1** **2** **0** then **#** and begin speaking. Hang up when finished.

Resident Instructions (continued)

Direct Command (Single Family Residence ONLY): 121 - 122 - 123 - 124 - 125 - 126

Direct command allows you to control the unit from the residence phone.

- ① Press **#** **#** from the residence phone.

The unit is now prepared to accept a direct command.

- ② Enter the Unit ID code (if applicable).

- ③ Select one of the following options:

- ⓐ CYCLE DOOR:

Press **1** **2** **1** then **#**

Cycles relay. Typically used to momentarily open a door/gate for a visitor without having the visitor initiate a call.

- ⓑ TOGGLE DOOR OPEN/CLOSE UNTIL:

Press **1** **2** **2** then **#**

Activate or deactivate the door relays associated with the relay group until a specified time of day.

If the door is currently latched open or in the unlock position of an automatic time zone then step 122 will latch the door closed and vice versa.

- ⓒ GET DOOR STATUS:

Press **1** **2** **3** then **#**

Hear the status for a specified door. The status is open when the door is currently latched open, or in the unlock portion of an automatic time zone. The status is closed for all other times.

- ⓓ RELEASE DOOR:

Press **1** **2** **4** then **#**

Deactivates the door's relay associated with the relay group until a specified time of day, manually prompted to deactivate with a Release Door command, or a schedule override to unlock the door.

- ⓔ ENABLE/DISABLE CALL FORWARDING FOR RESIDENCE:

Press **1** **2** **5** **#** then enable (1) or disable (2) then **#**

- ⓕ ENABLE/DISABLE DO NOT DISTURB FOR RESIDENCE:

Press **1** **2** **6** **#** then enable (1) or disable (2) then **#**

③ (Optional) Select the Door (1-4) that you want to control. Press **#**. **NOTE:** If no door is selected then Door 1 is used.

④ ONLY for step #2 sections "b" and "c" - Enter the Latch Time (hhmm = Hour and Minute). Then **#**.

EXAMPLE: Relay will activate now.

Activates Relay(s) assigned to Door #2 until 8:20 AM. **NOTE:** The door was not previously latched open or in the unlock portion of an automatic time zone.

